

Tap Safari to explore the World Wide Web.



Surfing the Web

Safari lets you see web pages just as they were designed to be seen in computer-based browsers. A simple tap lets you zoom in; rotate iPhone sideways for a wider view. Search using Google or Yahoo!—both are built-in.

Opening and Navigating Webpages


Open a new webpage

- Tap the address field at the top of the screen, type the web address—*apple.com* or *www.google.com*, for example—and tap Go. If you don't see the address field, tap the status bar at the top of the screen.

As you type, any web address in your bookmarks or history list that contains those letters appears below. Tap a web address to go to its webpage.

If you don't see the address field, tap the status bar or scroll to the top of the page.

Erase all the text in the address field

- Tap the address field, then tap .






Follow a link on a webpage

- Tap the link.

Text links are typically underlined in blue. Many images also have links. A link can take you to another place on the web, open a map, call a phone number, or open a new preaddressed email.

Email, phone, and map links open Mail, Phone, or Maps on iPhone. To return to Safari, press the Home button and tap Safari.

If a link leads to a sound or movie file supported by iPhone, Safari plays the sound or movie. For supported file types, see page 111.

To	Do this
See a link's destination address	Touch and hold the link. The address pops up next to your finger. You can touch and hold an image to check whether it has a link.
Stop a page from loading if you change your mind	Tap  .
Reload a webpage	Tap  .
Return to the previous or next webpage	Tap  or  in the navigation bar at the bottom of the screen.
Return to any of the last several webpages you've visited	Tap  and tap History. To clear the history list, tap Clear.
Send a webpage address over email	Tap the address field and tap Share. You must have an email account set up on iPhone (see page 43).

Zooming In to See a Page More Easily


View a webpage in widescreen orientation

- Rotate iPhone sideways. Safari automatically reorients and expands the page.



Resize any column to fit the screen

- Double-tap the column. The column expands, so you can read it more easily.

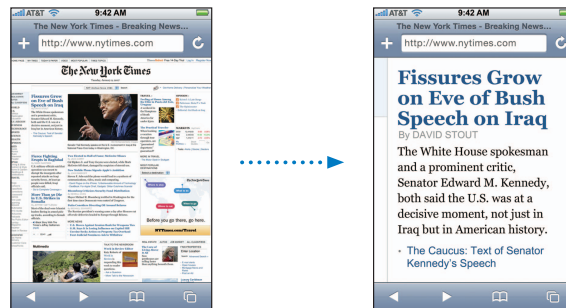

Double-tap again to zoom back out.

Zoom in on part of a webpage

- Double-tap the part of the page you want to zoom in on. Double-tap again to zoom out.

Zoom in or out manually

- Pinch to zoom in or out.

Pan and scroll around the page

- Drag up, down, or sideways. When scrolling or panning, you can touch and drag anywhere on the page without activating any links. If you tap a link, you follow the link, but if you touch a link and drag, the page scrolls or pans.

Searching the Web

By default, Safari searches using Google. You can set it to search using Yahoo!, instead.

Search for anything on the web


- 1 Tap the address field, then tap the Google search field.
- 2 Type a word or phrase that describes what you're looking for, then tap Google.
- 3 Tap a link in the list of search results to open a webpage.

Set Safari to search using Yahoo!


- From the Home screen choose Settings > Safari > Search Engine, then choose Yahoo!.


Opening Multiple Pages at Once

You can have more than one webpage open at a time. Some links automatically open a new page instead of replacing the current one.


The number inside the pages icon  at the bottom of the screen shows how many pages are open. If there's no number inside, just one page is open.

For example:


 = one page is open

 = three pages are open

Open a new page



- Tap  and tap New Page.

See all open pages and go to another page that's open

- Tap  and flick left or right. When you get to the page you want, tap it.



Close a page

- Tap  and tap . You can't close a page if it's the only one that's open.

Typing in Text Fields

Some webpages have forms or text fields you can enter information in.

Bring up the keyboard

- Tap inside a text field.

Move to other text fields on the page

- Tap another text field. Or tap the Next or Previous button.

Submit the form

- Once you finish filling out the text fields on the page, tap Go or Search. Most pages also have a link you can tap to submit the form.


Dismiss the keyboard without submitting the form

- Tap Done.

Using Bookmarks


You can bookmark webpages, so you can quickly return to them at any time without having to type the address.

Bookmark a webpage




- Open the page and tap . Then tap Save.

Before you save a bookmark you can edit its title or choose where to save it. By default, the bookmark is saved in the top level Bookmarks folder. Tap Bookmarks to choose another folder.

Open a bookmarked webpage

- Tap , then choose a bookmark or tap a folder to see the bookmarks inside.

Edit a bookmark or bookmark folder

- Tap , choose the folder that has the bookmark or folder you want to edit, and tap Edit. Then do one of the following:
 - *To make a new folder*, tap New Folder.
 - *To delete a bookmark or folder*, tap  next to the bookmark or folder.
 - *To reposition a bookmark or folder*, drag  next to the item you want to move.
 - *To edit a bookmark's or folder's name or address, or to put it in a different folder*, tap the bookmark or folder.

Syncing Bookmarks

If you use Safari on the Mac, or Safari or Internet Explorer on the PC, you can sync bookmarks on iPhone with bookmarks on your computer.

Sync bookmarks between iPhone and your computer

- Connect iPhone to your computer. If bookmarks are set to be synced (see page 6), the sync begins.

Safari Settings

Blocking Pop-Ups

Many websites have pop-ups—new pages that appear when you didn't intend for them to. Many pop-ups are advertisements.

Block or allow pop-ups

- From the Home screen choose Settings > Safari, then turn Block Pop-ups on or off. Blocking pop-ups stops only pop-ups that appear when you close a page or open a page by typing its address. It doesn't block pop-ups that open when you click a link.

Security Settings

By default, Safari is set to show some of the features of the web, like some movies, animation, and web applications. You may wish to turn off some of these features to help protect your privacy and iPhone from possible security risks on the Internet.

Change security settings

- From the Home screen choose Settings > Safari, then do one of the following:
 - *To enable or disable JavaScript*, turn JavaScript on or off. JavaScript lets web programmers control elements of the page—for example, a page that uses JavaScript might display the current date and time or cause a linked page to appear in a new pop-up page.
 - *To enable or disable plug-ins*, turn Plug-ins on or off. Plug-ins allow Safari to display some kinds of video.
 - *To set whether Safari accepts cookies*, tap Accept Cookies and choose Never, "From visited," or Always. A cookie is a piece of data that a website puts on iPhone so the website can remember you when you visit again. That way, webpages can be customized for you based on information you may have provided. Some pages won't work correctly unless iPhone is set to accept cookies.
 - *To clear all cookies from Safari*, tap Clear Cookies.
 - *To clear the browser cache*, tap Clear Cache. The browser cache stores the content of pages so the pages open faster the next time you visit them. If a page you open isn't showing new content, clearing the cache may help.